


# CableMaster 200

Quick Start Guide

Kurzanleitung

Guide de Démarrage  
Rapide

Guía de inicio rápido

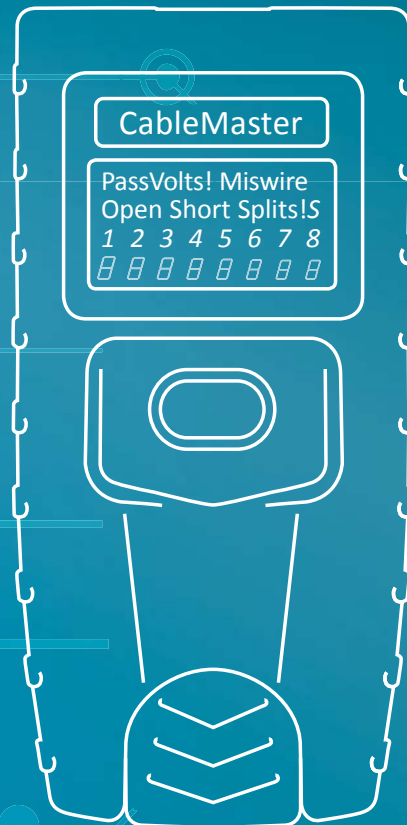

# CableMaster 200



## BUTTON FUNCTION

- 1 LCD Display
- 2 On/Off, Cable Testing, Mode Testing, LOOP

The CableMaster 200 has a single button for operation. With this you can start tests and select all other functions and options. Depending on how long the button is pressed (less than 1 sec. or more than 1 sec.), different functions are called up:

**1. Cable Test (short key press):** Briefly pressing the key of the switched off CableMaster 200 starts a cable test, "Test" appears on the display. The result is displayed. If the button is briefly pressed again another test is started. When not in use, the CableMaster 200 switches off automatically after approx. 20 seconds (unless the device is in LOOP mode). If the button is held down until "LOOP" appears on the display and then released, continuous tests are performed and the result display is updated.

With a long continuous button press, the endurance test is stopped and the mode selection is called up. If the "LOCATE"-Mode is selected and an ID Remote is connected instead of the Wiremap Remote the CableMaster 200 displays the number of the connected ID Remote.

Possible display options are:

- "Open": Connection to the Remote is interrupted
- "Pass": The test was successfully executed
- "Short": Short circuit between one or more pairs
- "Split": Wrong laying of the wires within different pairs

**2. Mode Selection (long key press):** Long press of the button of the switched on CableMaster 200 calls up the mode selection. The cable test and tone generator modes are displayed one after the other. The mode displayed when the button is released is executed. The modes appear in the following order when the CableMaster 200 is switched on:

- **OFF:** If the display shows "OFF" and the button is released at the same time, the CableMaster 200 switches off.
- **LOOP:** Cable test in continuous mode until the test is terminated by a long button press or the mode selection is called up.
- **LOCATE:** Detects network map-only ID remotes #1 - #5. This mode is not used to test cables but is used only to map the location of the jack that the far end is connected to using the map-only ID remotes. For testing cables use the master remote stored in the bottom of the tester.
- **Hi Lo 1, Hi Lo 2, Hi, Lo (four tone patterns):** The next four modes are tone generation modes with different sound patterns. "Hi Lo" tone sequences are transmitted in two frequencies of different lengths. "Hi" and "Lo" only have one frequency at a time. By briefly pressing a key in one of the sound modes, the pairs of wires that are affected by the sound signal change. The corresponding pins are displayed.
- **CABLE:** The same cable test is performed, as with a short push-button action.

**NORTH AMERICA & CANADA**

Softing Inc.  
Knoxville, Tennessee  
Phone: +1.865.251.5252  
E-mail: sales@softing.us

**ASIA/PACIFIC**

**Singapore**

Softing Singapore Pte. Ltd.  
Singapore  
Phone: +65-6569-6019  
E-mail: asia-sales.itnetworks@softing.com

**China**

Softing Shanghai  
Shanghai  
Phone: +86-21-61063031  
E-mail: china-sales.itnetworks@softing.com

**EUROPE/MIDDLE EAST/AFRICA**

**Germany**

Softing IT Networks GmbH  
Haar  
Phone: +49 89 45 656 660  
E-mail: info.itnetworks@softing.com

**France**

Softing SARL  
Créteil, Île-de-France  
Phone: +33145172805  
E-mail: info.france@softing.com

**Italy**

Softing Italia Srl.  
Cesano Boscone, Milano  
Phone: +39 02 4505171  
E-mail:

**Austria**

Buxbaum Automation GmbH  
Eisenstadt  
Phone: +43 2682 7045 60  
E-mail: office@myautomation.at

For technical information and support please contact the Softing office in your country.  
[itnetworks.softing.com](mailto:itnetworks.softing.com)

